




OLYMPUS ART

QUICK REFERENCE GUIDE

IMPORTANT

This Quick Reference Guide is intended only as a reminder of the controls and their operation. It is most important that before operating the refuse collection vehicle, all operatives:

- Have undertaken a recognised training course in the safe operation of the refuse collection vehicle.
- Read, understand and observe all the instructions, warnings and cautions stated in the Olympus ART Manual.

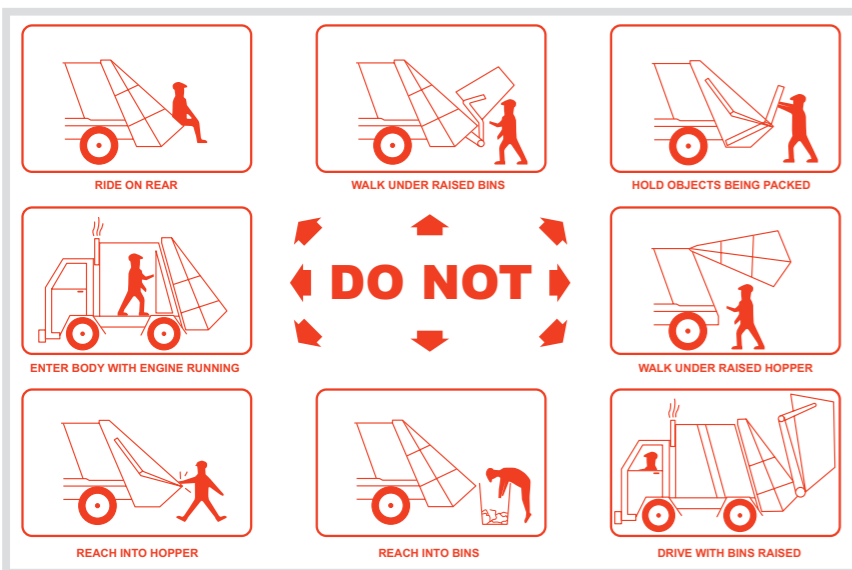


2-7

For detailed information, see relevant page in the:

- Olympus ART Operator's Handbook
- Service Manual

LOADING REFUSE

Caution:
Do not overfill the hopper when loading refuse.

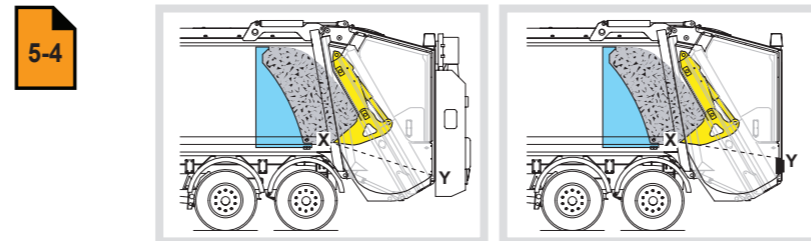

AUTOMATIC LOADING CYCLE

5-6

1. Check that the tailgate area is clear.
2. Press and release the 'Start pack cycle' push-button.

- The compaction mechanism will carry out one complete cycle and stop.


SHORT CYCLE

5-6

1. Check that the tailgate area is clear.
2. Press and release the 'Start pack cycle' push-button.
3. Press and release the 'Short cycle' push-button.

- The packer plate will open and the carriage plate will move downwards.
- The carriage plate will stop moving downwards, the packer plate will close and then the carriage plate will move upwards.




INTERMITTENT/CONTINUOUS CYCLE

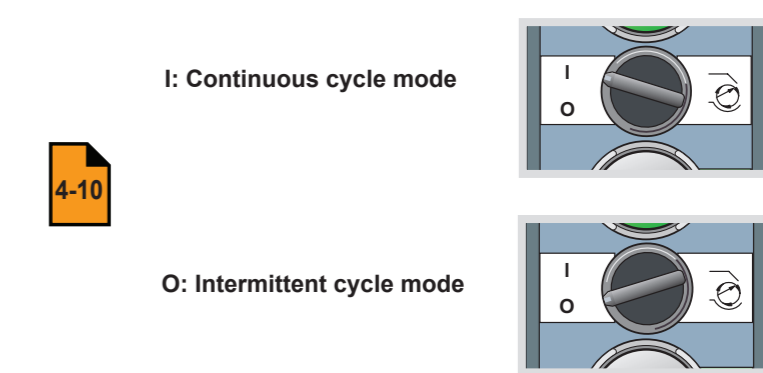

DISCHARGING REFUSE

WARNINGS:
MAKE SURE THAT YOU KNOW THE HEIGHT OF YOUR VEHICLE WITH THE TAILGATE AND LIFTING DEVICE, IF FITTED, RAISED.


MAKE SURE TAILGATE AREA IS CLEAR.

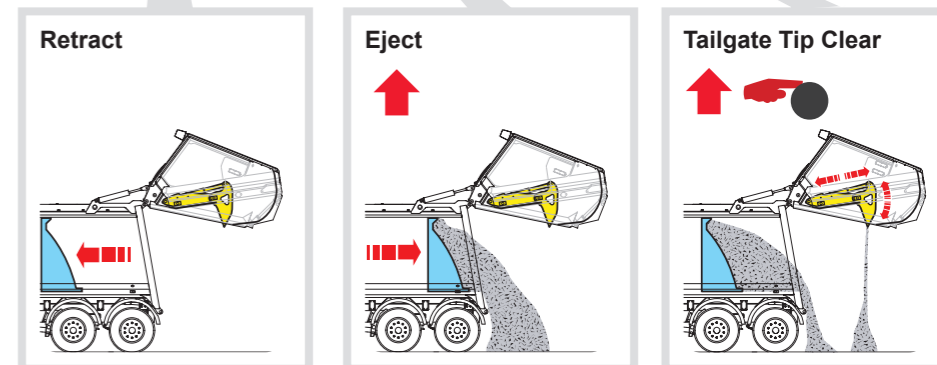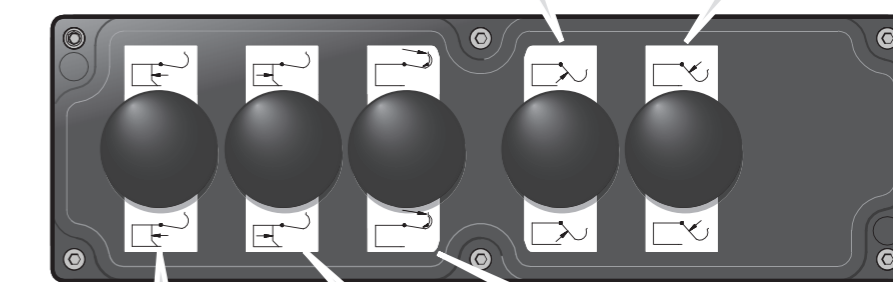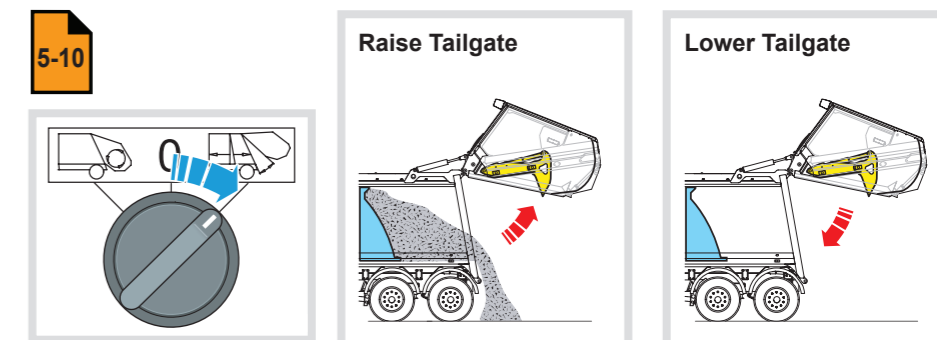


= Tailgate must be raised. = Press and hold push-button.

IN AN EMERGENCY


Press any red emergency stop push-button to stop machine operating.

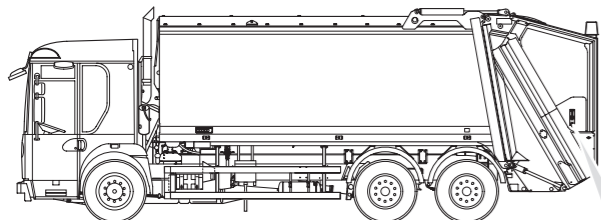



4-12

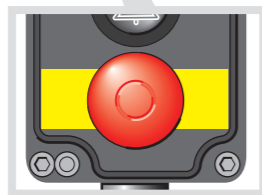

Press yellow push-button to rescue compaction mechanism.

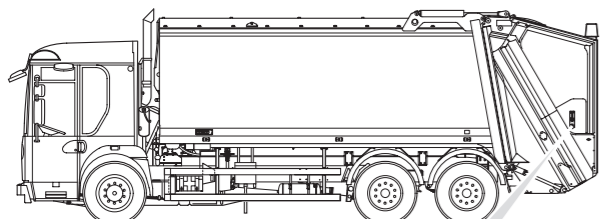


4-11

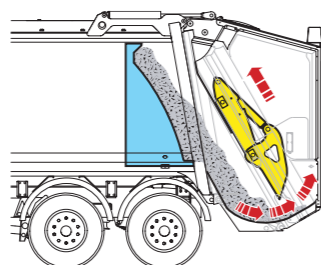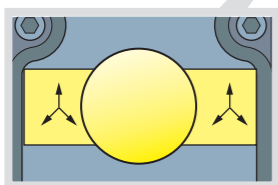

WARNING BEACONS





4-4

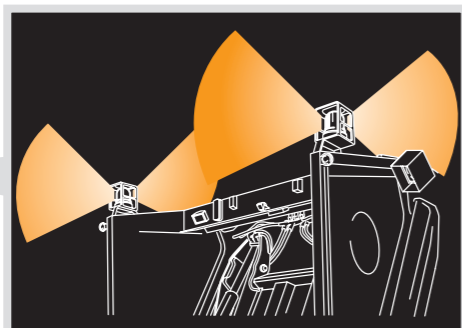

CLEANING

Drains

5-4

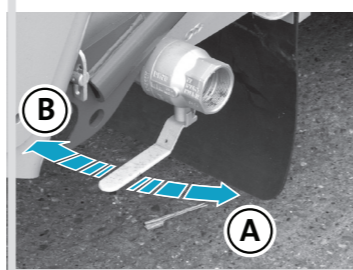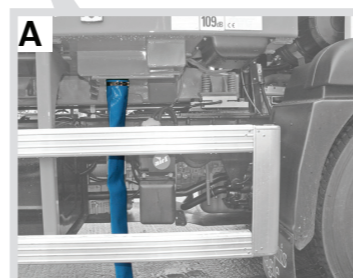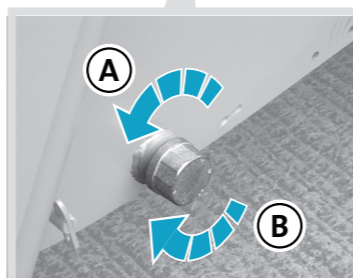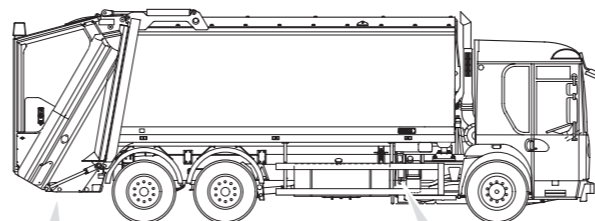

A = Open B = Close




WARNINGS:
HIGH PRESSURE WATER JETS CAN SERIOUSLY DAMAGE ELECTRICAL EQUIPMENT.

REMOVE REFUSE WHICH HAS ENTERED BODY IN FRONT OF EJECTION PLATE.

CLEAN UP ANY OIL SPILLAGE IMMEDIATELY.

TAILGATE PROP

5-12

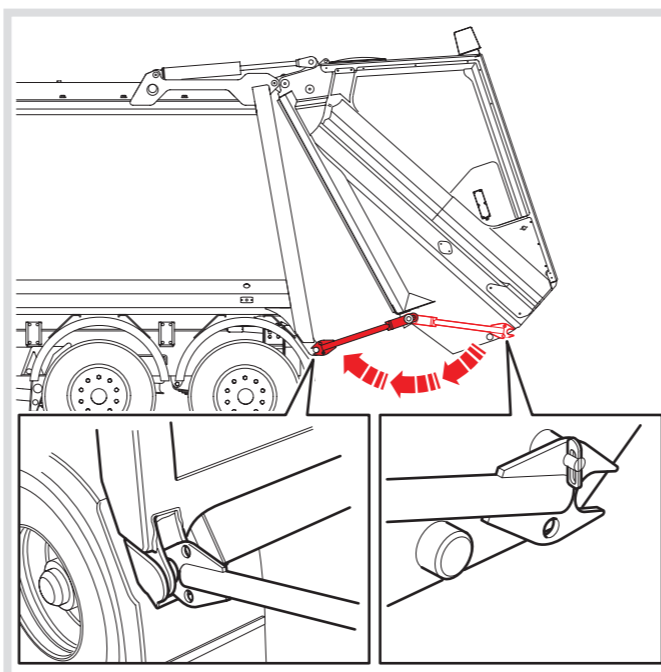

OIL LEVEL

4-3

